

Alesis SR-16 Preset Rhythm Patterns

Press **PATTERN/SONG**, then **PERFORM, PRESET/USER**, use **TEMPO/PAGE**, then **PLAY**

Nr	Name	BPM	Tempo range
00	Rock 1	120	110-130
01	Rock 2	95	80-90
02	Rock 3	130	125-135
03	Rock 4	105	100-110
04	Rock 5	140	135-145
05	Rock 6	95	90-95
06	Rock 7	130	125-135
07	Hard Rock 1	140	135-150
08	Hard Rock 2	120	115-125
09	Hard Rock 3	115	110-130
10	R&B 1	105	100-115
11	R&B 2	125	120-130
12	R&B 3	110	100-120
13	Funk 1	110	105-115
14	Funk 2	110	100-120
15	Blues 1	60	55-70
16	Blues 2	100	95-115
17	Rap 1	110	100-115
18	Rap 2	140	130-145
19	Rap 3	95	90-100
20	Techno 1	120	110-130
21	Techno 2	140	135-150
22	Techno 3	120	120-130
23	Reggae 1	125	120-130
24	Reggae 2	135	130-140

Nr	Name	BPM	Tempo range
25	Jazz Rock 1	130	120-140
26	Jazz Rock 2	100	115-135
27	Fusion 1	130	70-90
28	Fusion 2	125	70-90
29	New Age 1	75	105-130
30	New Age 2	80	115-140
31	Country 1	115	115-135
32	Country 2	130	120-140
33	Country 3	120	95-110
34	Country Rock	130	115-130
35	Rockabilly	100	110-120
36	Jazz 1	125	90-110
37	Jazz 2	110	130-140
38	Dixie	100	90-110
39	Polka	135	130-140
40	Latin 1	100	90-110
41	Latin 2	105	95-120
42	Latin 3	130	120-140
43	Latin 4	120	115-130
44	Latin 5	130	120-135
45	Ballad 1	95	80-110
46	Ballad 2	90	85-100
47	Ballad 3	85	80-100
48	Ballad 4	120	100-130
49	Ballad 5	100	90-110